

Replacing faceplate in new style bezel on PM4 instrumentation

Step 1:
Grasp bezel in middle of long side and pull.
The bezel rim should come away.



Step 1

Step 2:
Carefully peel old faceplate off
base part of bezel.



Step 2 and Step 3

Step 3:
Clean any remaining adhesive from the
base part of the bezel.

Step 4:
Peel translucent protective
covering from front of new lexan.



Step 4

Step 5:
Peel protective coverings from the
back of the new faceplate.



Step 5

Step 6:
Using the bezel rim as an alignment tool,
lay the new faceplate adhesive side up in the rim.



Step 6

Step 7:
Line up top part of bezel with new faceplate
to the bottom part of the bezel using
the bottom edge.
NOTE: Make sure orientation is correct.



Step 7

Step 8:
Snap top part of bezel in place by
pressing into place on top edge of bezel.



Step 8

Step 9:
Smooth down faceplate within bezel with
a soft cloth or tissue.